

## **Höegh Autoliners STANDARD as follows: Fore and aft stowed vehicles are secured in the following manner:**

- 1 • Gear shift lever, in first gear or reverse.  
Automatic transmission in «Park» position.
- 2 • Handbrake fully engaged.
- 3 • Number of lashing, see Securing of Cars/High and Heavy
- 4 • Chocks must be used on units stowed in ramps and athwartships.  
Minimum of 2 chocks must be used on each unit when stowed in ramps and athwartships.
- 5 • Ignition key removed from ignition lock and placed according to manufacturers or Höegh Autoliners instructions.  
Lights, radios etc. to be switched off.
- 6 • All windows to be closed.
- 7 • Shift Lock Automatic Gearbox  
The automatic gearbox is characterised by a system that locks the lever in position **P**.  
To avoid damage the gear lever, it is vital to adhere to the following procedure before using the lever when it is in position **P**:

### **A - Start engine**


### **B - Apply the foot brake**

Vehicle fitted with these automatic gearboxes are identified by a figurine on the shift knob.



# Höegh Autoliners Stowage Standard


## Höegh Autoliners General Stowage Instruction Right Hand Drive

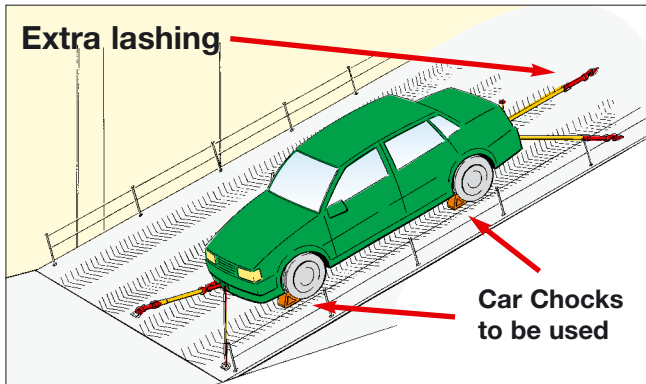


### Ramp Stowage

Lashings as above.

Vehicles stowed on ramps must **always** be stowed with the engine facing down. This prevents drainage of fuel from engine. Preferable, cars with automatic gear should be stowed in fixed ramps. Other requirements from manufacturer supersedes Höegh Autoliner standard.

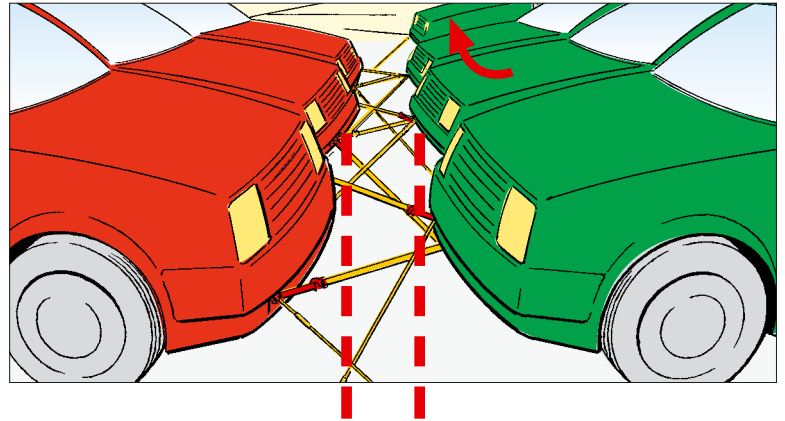

**Minimum One (1) Meter  
Höegh Autoliners Key Car's from main deck  
up to Top deck**

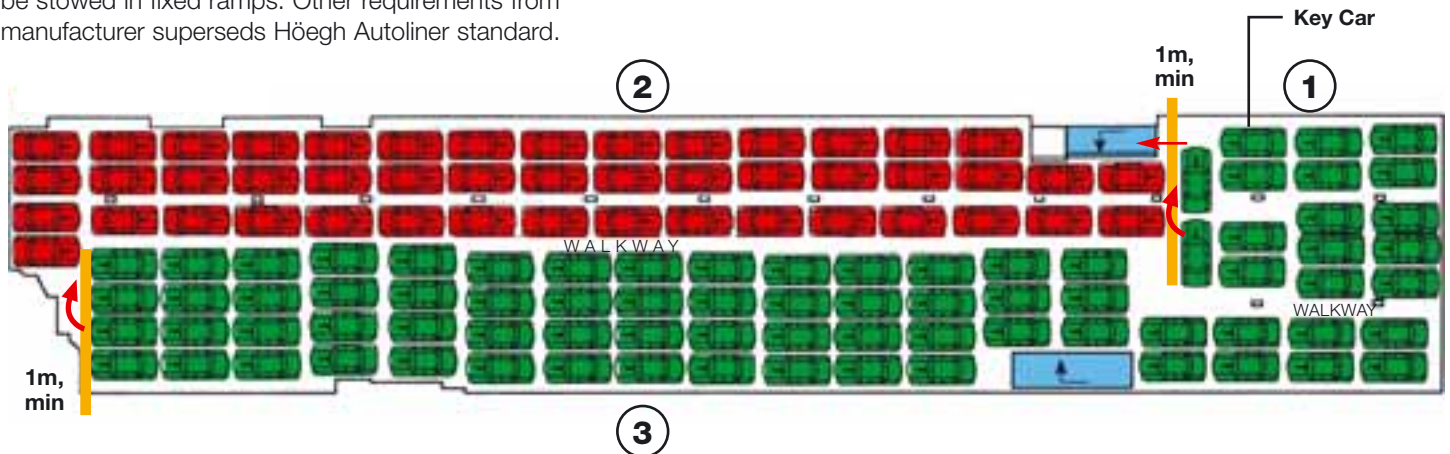

### SECURE DRIVEWAY

The Master/Chief Officer must ensure that internal ramps are in good working condition and rigged according to procedure before loading starts.

### WALKWAYS

Remember always to keep walkways on every deck.




## HÖEGH AUTOLINERS STOWAGE SYSTEM BUMPERS IN LINE MODEL BY MODEL

### Right Hand Driven

#### Minimum distances

|                            |        |
|----------------------------|--------|
| Bumper to bumper           | 30 cm  |
| Side to side               | 10 cm  |
| Side mirror to side mirror | 2-5 cm |
| Side to obstruction        | 15 cm  |
| Bumper to bulk head        | 30 cm  |
| Overhead                   | 10 cm  |
| Walkway                    | 50 cm  |
| Emergency exit and ladders | 50 cm  |

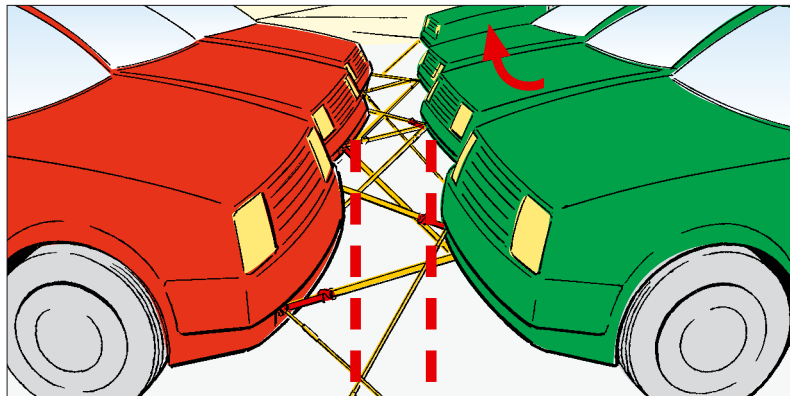


Key Car

Minimum 1 meter distance

# Höegh Autoliners Stowage Standard


## Höegh Autoliners General Stowage Instruction Left Hand Drive

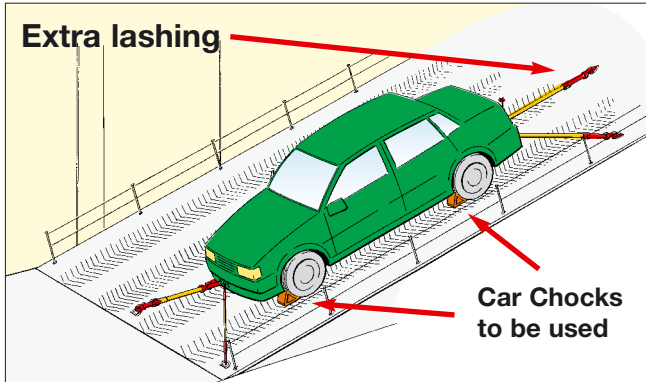


### Ramp Stowage

Lashings as above.

Vehicles stowed on ramps must **always** be stowed with the engine facing down. This prevents drainage of fuel from engine. Preferable, cars with automatic gear should be stowed in fixed ramps. Other requirements from manufacturer supersedes Höegh Autoliner standard.

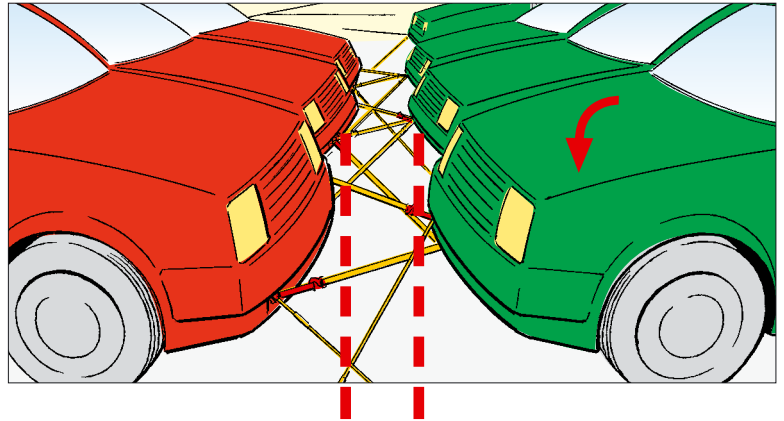

**Minimum One (1) Meter  
Höegh Autoliners Key Car's from main deck  
up to Top deck**

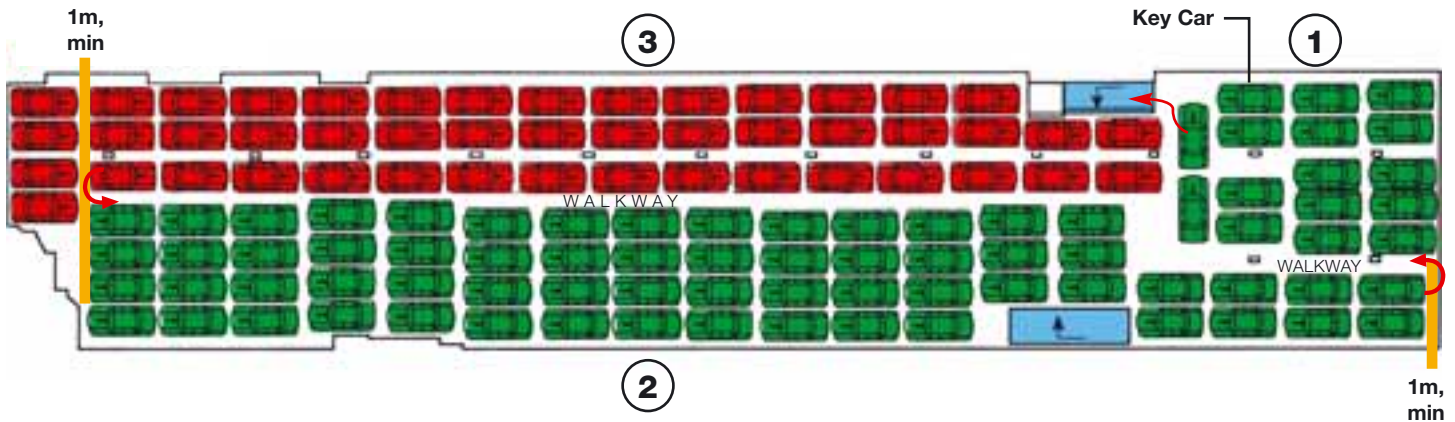

### SECURE DRIVEWAY

The Master/Chief Officer must ensure that internal ramps are in good working condition and rigged according to procedure before loading starts.

### WALKWAYS


Remember always to keep walkways on every deck.

## HÖEGH AUTOLINERS STOWAGE SYSTEM BUMPERS IN LINE MODEL BY MODEL

### Left Hand Driven

#### Minimum distances


|                            |        |
|----------------------------|--------|
| Bumper to bumper           | 30 cm  |
| Side to side               | 10 cm  |
| Side mirror to side mirror | 2-5 cm |
| Side to obstruction        | 15 cm  |
| Bumper to bulk head        | 30 cm  |
| Overhead                   | 10 cm  |
| Walkway                    | 50 cm  |
| Emergency exit and ladders | 50 cm  |

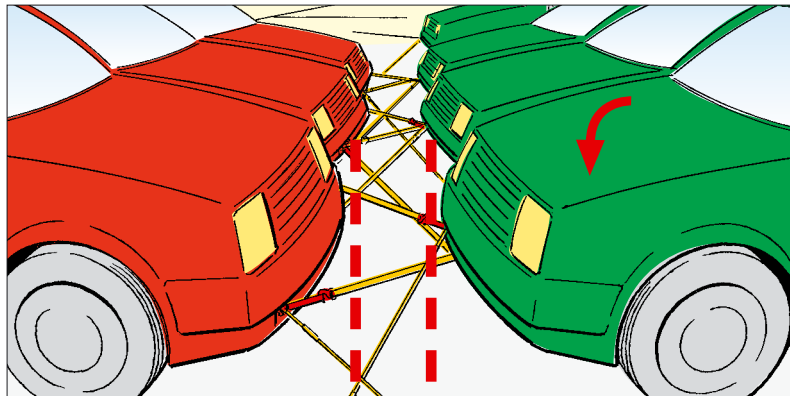

**Key Car**  
**Minimum 1 meter distance**

# Höegh Autoliners Stowage Standard


## Höegh Autoliners General Stowage Instruction Head Out Stowage

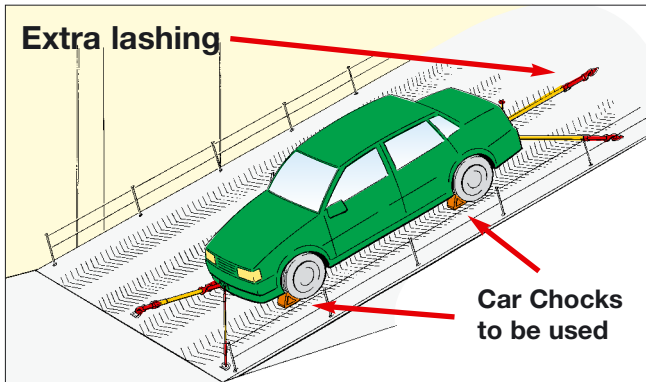

### Ramp Stowage

Lashings as above.

Vehicles stowed on ramps must **always** be stowed with the engine facing down. This prevents drainage of fuel from engine. Preferable, cars with automatic gear should be stowed in fixed ramps. Other requirements from manufacturer supersedes Höegh Autoliner standard.

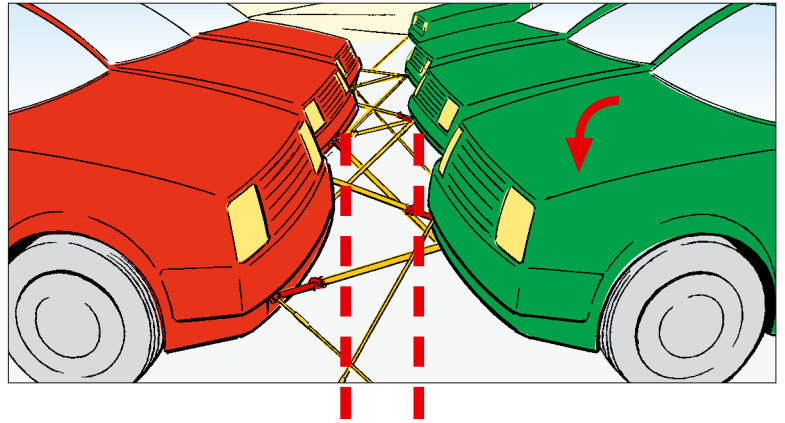

### SECURE DRIVEWAY

The Master/Chief Officer must ensure that internal ramps are in good working condition and rigged according to procedure before loading starts.

### WALKWAYS

Remember always to keep walkways on every deck.

