


Short Sea/Feeder Stowage/Lashing of cars

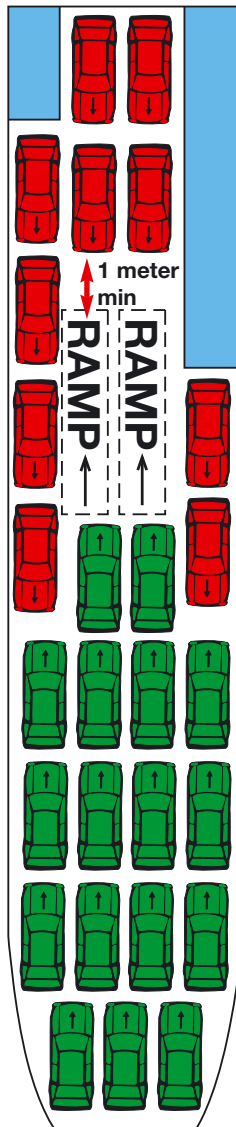

1. Head out stowage only.
2. All other stowage instructions according to Höegh Autoliners Cargo Quality Manual.

H/H Short Sea Lashing/Stowage

1. Stowing of the trailer according to preliminary stowage instructions from the vessel.
2. Positioning of trailer-horse under the trailer.
3. Positioning of the legs of the trailer to down position.
4. Positioning of the trailer-chocks when the trailers are in stowed position.
5. Proper lashing of the trailer according to vessel cargo securing manual.
6. Head out stowage only.

