

Transshipment

Requirements

When loading or discharging Höegh Autoliners transshipment cargo, Höegh Autoliners Cargo Quality stated in our manual shall apply. Manufactures standard may exceed Höegh Autoliners standard and must be followed.

Terminal Storage

Distances between cars are according to Höegh Autoliners Cargo Quality Manual. Cars shall be locked and keys safely been taken care of by the Terminal Operator. Remember -- turn off the radio -- close all windows.

The cars should be placed together and stowed model by model and separated Port by Port. When cars are placed at the terminal, guards should be placed there 24 hours a day.

Stowage

When loading or discharging Höegh Autoliners transshipment cargo, Höegh Autoliners cargo handling quality as stated in our manual shall apply.

